



# Bird Chase Super Sonic™

IB50

## INSTALLATION & OPERATING INSTRUCTIONS

The **Bird•B•Gone® Bird Chase Super Sonic™** system is a programmable outdoor sound deterrent used to deter birds from large open spaces. Birds hear on the same level as humans and do not hear ultrasonic noises. The system features audible distress and predator calls from over 24 types of birds. These sounds are broadcasted for about two minutes in ten-minute intervals. When birds hear these calls, their natural instinct is to flee the area.

**BIRD SPECIES** Pigeons, crows, gulls, woodpeckers, starlings, grackles, sparrows, geese and more

**BIRD PRESSURE** Light to medium

**WHERE TO USE** Open fields, semi-enclosed areas, sports fields, storage facilities, backyards, courtyards, loading docks, gardens, patios

**PACKAGE CONTENTS** One (1) Bird Chase Super Sonic™ System with Built-In Speaker  
One (1) AC Adaptor with 20 FT. Cord

### PRIOR TO INSTALLATION

- **Observe the birds and inspect the affected areas.** Discover why the birds are infesting your property. All birds need food, water and shelter. Eliminating these variables increases the success of your bird abatement program.
- **Clean and disinfect.** Before installation, it is important to remove all debris, including bird droppings, nesting materials, etc. Clean the area thoroughly and disinfect using a hospital-grade disinfectant. Allow the area to dry completely before proceeding with the installation. For more information, visit [birdbgone.com/safety](http://birdbgone.com/safety).
- Depending on the individual bird problem, it may be necessary to use the **Bird Chase Super Sonic™** system in conjunction with one or more bird control products to maximize the effectiveness. The **Bird Chase Super Sonic™** system, used in tandem with Bird B Gone Spikes, Bird Netting, Bird Wire, Spiders, Transparent Bird Gel, or other products often yields better results than any one method alone.

### INSTALLATION QUESTIONS?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915  
Email: [nobirds@birdbgone.com](mailto:nobirds@birdbgone.com)



Scan to watch our installation instruction videos:



[BIRDBGONE.COM](http://BIRDBGONE.COM) | 800.392.6915

### AREA OF COVERAGE

Each complete **Bird Chase Super Sonic™** system covers up to one acre. Separate speaker sets can be purchased for additional areas of coverage. The system accepts up to four additional speakers. Two added speakers provide three acres of coverage; four added speakers provide five acres of coverage.



### CHOOSING A LOCATION

Place the **Bird Chase Super Sonic™** system where pest birds gather most often: on rooftops, warehouses, semi-enclosed areas, open fields, storage facilities, backyards, courtyards, loading docks, gardens, patios, parks, golf courses, pool areas.

THE AC ADAPTOR MUST BE PROTECTED. DO NOT LEAVE IT EXPOSED TO THE ELEMENTS. DO NOT USE AN EXTENSION CORD. PLUG IT INTO AN INDOOR OR PROTECTED RECEPTACLE.

### MOUNTING

The Control Box has two screw hole mounts on the back of the box. When mounting to a post, side of a building or other surface, use at least 1-1/2" long screws. Be sure to leave at least 3/8" to 1/2" of the screw exposed so that the control box can be easily hung and secured to the surface. Do not point the unit/speaker straight up. It will fill with water and not function correctly. Repeat these instructions for mounting the remote speakers.

### INITIAL SETUP

1. Remove contents from the box.
2. To access the Control Box located on the front of the unit, open the clear weatherproof cover by pressing down on the gray tabs with both thumbs while lifting up the middle tab.
3. ENSURE that the Power Switch is in the "OFF" position.
4. **VOLUME CONTROL WARNING!**  
ADJUST the Volume Control to the "MIN" position by turning the volume dial counterclockwise to the lowest position.
5. Plug the AC Adaptor into the 110v Power Source. For 220v, use adaptor purchased separately. AC ADAPTOR MUST BE PROTECTED. DO NOT LEAVE IT EXPOSED TO THE ELEMENTS, DO NOT USE AN EXTENSION CORD. Plug it into an indoor or protected receptacle.
6. Find the Power Jack on the side of the operating unit (labeled POWER INPUT). Connect the power cord to the POWER INPUT jack.
7. Flip the Power Switch to the "ON" position. The red Power Light will indicate that the unit is powered on and ready for programming. The LED display will show icons for Sun (daytime), Moon (nighttime), and Sound.
8. If all components in step 7 are functioning properly, proceed to program the unit.

### INSTALLATION QUESTIONS?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915  
Email: nobirds@birdbgone.com

Scan to watch our installation instruction videos:



### PROGRAMMING

1. Make sure the unit is in the “ON” position and the volume control is turned down to “MIN.”

2. The “SELECT” button will allow you to program the unit for:

- Daytime Only

The system will only play when the sensor detects sunlight.

- Nighttime Only

The system will only play when the sensor detects no sunlight.

- All The Time

The system will play at all times, regardless of sunlight.

3. After you choose your desired mode of time, Push the “SET” button.

4. The “MODE” button will allow you to program the unit for your target bird. The General Mode can be used for other species not listed. Push the “MODE” button until you see your desired bird on the display. When you are ready to select the desired bird, push the “SET” button.

- Pigeon – 1
- Starling – 2
- Woodpecker – 3
- Grackle – 4
- Crow – 5
- Gull – 6
- General – 7
- Goose – 8

5. Turn the Volume Control up slowly. You will hear the sounds emitting from the speaker.

Adjust the control to the desired volume.

**NOTE: THE VOLUME CONTROL ADJUSTS THE INTERNAL BUILT-IN SPEAKER ONLY.**

6. Close the Weatherproof Cover once you have finished programming. Be sure it is completely closed by snapping tightly.

**NOTE: The system will play for approx. 2 minutes, be silent for approx. 10 minutes, play for approx. 2 minutes, be silent for approx. 10 minutes, and continue in this manner (regardless of the Bird selected). Once the system has completed its cycle of distress calls and predator sounds, it will repeat.**

To re-program, repeat Steps 1 – 6.

**NOTE: Once the switch is moved to the “OFF” position, all previous programming will be lost. When the unit is switched “OFF” be sure not to turn it on again for at least 60 seconds (1 minute).**

#### INSTALLATION QUESTIONS?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915  
Email: nobirds@birdbgone.com

Scan to watch our installation instruction videos:



### ADDITIONAL SPEAKERS

Additional speaker sets can be purchased separately or as part of Bird Chase Super Sonic Pro Packs. Each satellite speaker comes with 100 feet of speaker wire.

- **Super Sonic Speakers - Set of 2 (SONIC-SP2):**  
If you purchased a Bird Chase Super Sonic and want to increase your area of coverage, you can order up to two sets of speakers. The Bird Chase Super Sonic Control Box can accommodate up to four additional speakers.
- **Bird Chase Super™ Sonic Pro Pack 2 (IB50-PPII):**  
Includes the Bird Chase Super Sonic System and 2 additional remote speakers, for coverage of up to 3 acres.
- **Bird Chase Super™ Sonic Pro Pack 4 (IB50-PPIV):**  
Includes the Bird Chase Super Sonic System and 4 additional remote speakers, for coverage of up to 5 acres.



### MAINTENANCE & CARE

The Bird Chase Super Sonic system is weatherproof and can be left outdoors. Be sure to keep it clean. **DO NOT USE THE AC ADAPTOR IN INCLEMENT WEATHER.**

### TROUBLESHOOTING

THE UNIT IS NOT WORKING PROPERLY IN THE DAYTIME OR NIGHTTIME MODE:

- Be sure that nothing is blocking or obstructing the light sensor. For Nighttime Mode, be sure that no “bright lights” are shining on the system, causing it to not play.
- For Daytime Mode, be sure to place unit in direct sunlight. Any shadows or shade will cause the unit to pause until direct sunlight is detected.

THE UNIT IS ON BUT NO SOUNDS ARE EMITTING:

- Be sure that the system is programmed correctly, and that the volume control is turned up.
- If the system was shut off and turned back on immediately, shut the system off for a minimum of 60 seconds and reprogram the unit.



#### INSTALLATION QUESTIONS?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915  
Email: [nobirds@birdbgone.com](mailto:nobirds@birdbgone.com)

Scan to watch our installation instruction videos:



[BIRDBGONE.COM](http://BIRDBGONE.COM) | 800.392.6915