



Little Giant® Honey Gate

Your newly purchased Little Giant® Honey Gate is typically used in a 5-gallon Honey Bucket during the honey extraction process. The Little Giant® BKT5 Honey Bucket comes ready to use with a pre-drilled hole. However, our honey gate can be used in a variety of different sized buckets to best suit your needs.

Below are instructions on drilling a hole (if needed) and installing your honey gate:

- Installation of the honey gate requires a 1.75" hole, located 5/8" (0.625") from the bottom of the bucket (*if not purchased with BKT5*).
- Using a 1.75" hole saw, drill the hole into the bucket.
- Install the honey gate by placing threaded end through the hole.
- Thread the nut on the inside of the bucket until the seal is tight on both the inner and outer edge to prevent any leakage.
- To open honey gate, loosen the wing nut on the outside and lift the gate up.

Note: If there are any leaks, verify that you have securely tightened the seal. If you have, you may need to tighten the wing nut to prevent leakage through the gate.



Little Giant® Honey Gate

Your newly purchased Little Giant® Honey Gate is typically used in a 5-gallon Honey Bucket during the honey extraction process. The Little Giant® BKT5 Honey Bucket comes ready to use with a pre-drilled hole. However, our honey gate can be used in a variety of different sized buckets to best suit your needs.

Below are instructions on drilling a hole (if needed) and installing your honey gate:

- Installation of the honey gate requires a 1.75" hole, located 5/8" (0.625") from the bottom of the bucket (*if not purchased with BKT5*).
- Using a 1.75" hole saw, drill the hole into the bucket.
- Install the honey gate by placing threaded end through the hole.
- Thread the nut on the inside of the bucket until the seal is tight on both the inner and outer edge to prevent any leakage.
- To open honey gate, loosen the wing nut on the outside and lift the gate up.

Note: If there are any leaks, verify that you have securely tightened the seal. If you have, you may need to tighten the wing nut to prevent leakage through the gate.

