


System III® Maintenance And Repair

If System III Will Not Spray


- The shut-off valve handle (11) may be in the OFF position.
 - Move the shut-off valve handle to the ON position
- The pressurized can may be empty.
 - Replace empty can with full one
- The white valve stem (3) in the gun may be clogged.
 - Replace the stem spring gasket (3) with new components found in every case of System III compatible products
 - Tighten the gun cap (2), ensuring the gun clip (4) is pushed down into a seated position not to interfere with the gun cap sea.

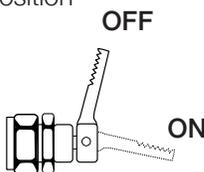

If Leak Occurs

- If there is a leak in the hose...
 - Remove the spring guard (8) from the nut and ferrule (7) by sliding it along the hose
 - Remove the nut and ferrule (7) from the female compression fitting and swivel (6, 9)
 - Cut the hose (14) above the hole
 - Place new nut and ferrule at hose end
 - Re-attach the spring and fitting
 - Re-assemble the System III and test
- If leaking occurs at the actuator or stem gasket...
 - If actuator (1) leaks, first replace actuator
 - If actuator (1) still leaks, be sure it is seated securely on the white valve stem (3)
 - If white valve stem (3) leaks after use, it may be necessary to re-seat the stem to force the stem gasket (3) to flex differently
 - Turn the white valve stem (3) 1/4 to 1/2 turn to reseat
 - Tighten the gun cap (2), ensuring the gun clip (4) is pushed down into a seated position not to interfere with the gun cap seal
 - If leaking still occurs, replace the white valve stem (3), stem spring (3) and stem gasket (3)
- If there is a leak at the gun cap...
 - Check to make sure the gun clip (4) is positioned properly
 - Push the gun clip (4) down into a better-seated position so that it does not interfere with the gun cap seal
 - Continue to put pressure on the gun clip (4), holding it in place while you tighten the gun cap (2)

- Actuator Cap
- Gun Cap
- Stem / Spring / Gasket Assembly
- Gun Clip
- Gun Body
- Swivel
- Nut & Ferrule for Compression Fitting
- Spring Guard
- Female Compression Fitting
- Shut-Off Valve
- Shut-Off Valve Handle
- Double Ring Adapter
- Squeeze Can Clamp
- Hose

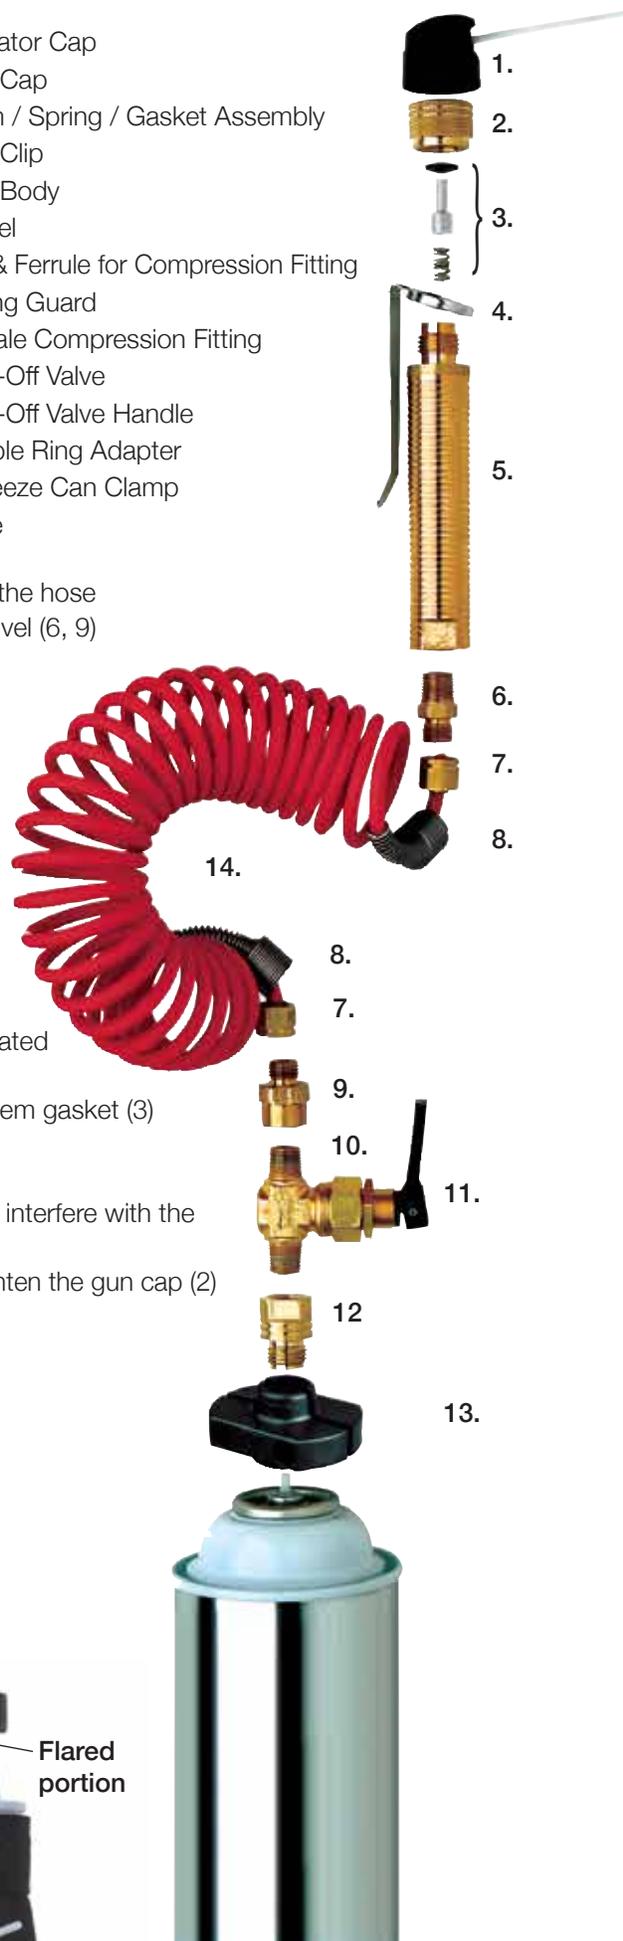

Preventative Maintenance Tips:

- Replace stem/ spring/gasket assembly weekly (3)
- Purge pressure from hose after each account service (11)
- Replace actuator cap (1) weekly
- Store with valve in off position
- Avoid damage to unit by storing securely in vehicle

BASF
We create chemistry

