
Scotts®Turf Builder® EdgeGuard®MINI Broadcast Spreader

 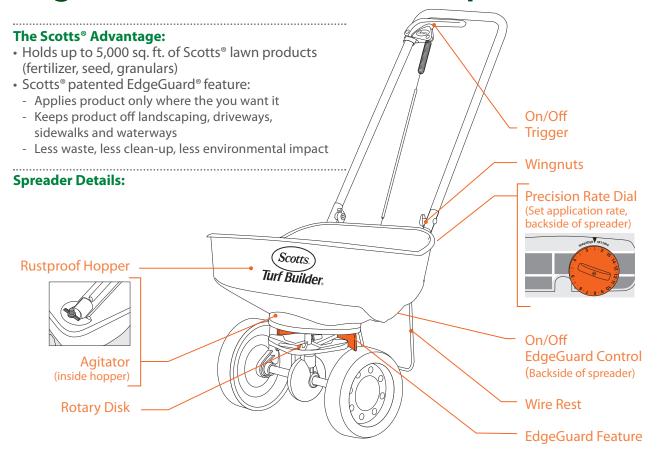


Assembly




Using the EdgeGuard Feature


To activate EdgeGuard feature, slide lever to "On" position, on backside of the spreader.



 The EdgeGuard Feature blocks off the right side of the spreader pattern to prevent product from spreading onto non-lawn areas. The EdgeGuard patented design automatically adjusts the flow rate to ensure even application.



 Spreader with EdgeGuard in the off position.







Scotts® Turf Builder® EdgeGuard® MINI Broadcast Spreader

Quick Start Instructions:


 Fill hopper with Scotts® lawn product of your choice

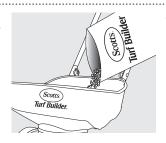


2. Turn orange rate dial to correct setting listed in the Spreader Setting section on the back of each package of Scotts product under. "Scotts" Broadcast/Rotary Spreaders"

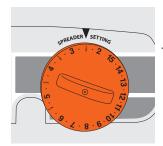

3. To apply product, begin walking at a steady pace (approx. 4ft./sec.), then squeeze and hold trigger (See diagrams below)

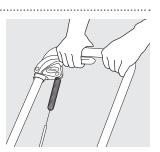


4. When finished, sweep stray particles back onto lawn area. If product lands on any hard surface such as a driveway, sidewalk, or road, sweep the product back onto the lawn to keep it from being washed into the storm sewers and ultimately surface waters.

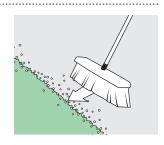

 5. Never leave product in the spreader. Pour leftover material back into the package and seal the package tightly








Application Tips

For Rectangular Lawns:


Apply two header strips across each end for a turning area. Then apply back and forth in the longest direction.

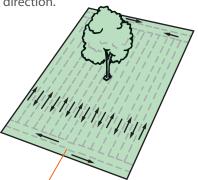

Header Strip

For Irregular-Shaped Lawns:

Apply one header strip around the entire lawn for a turning area, then apply back and forth.

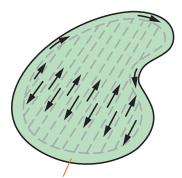

Header Strip

Spreader Overlap:

Using wheel tracks as a guide, make each pass 5 feet from the previous to ensure proper overlap and even lawn coverage. Do not leave spreader open when making turns.

