


TERMI-tool Assembly

771-000-110

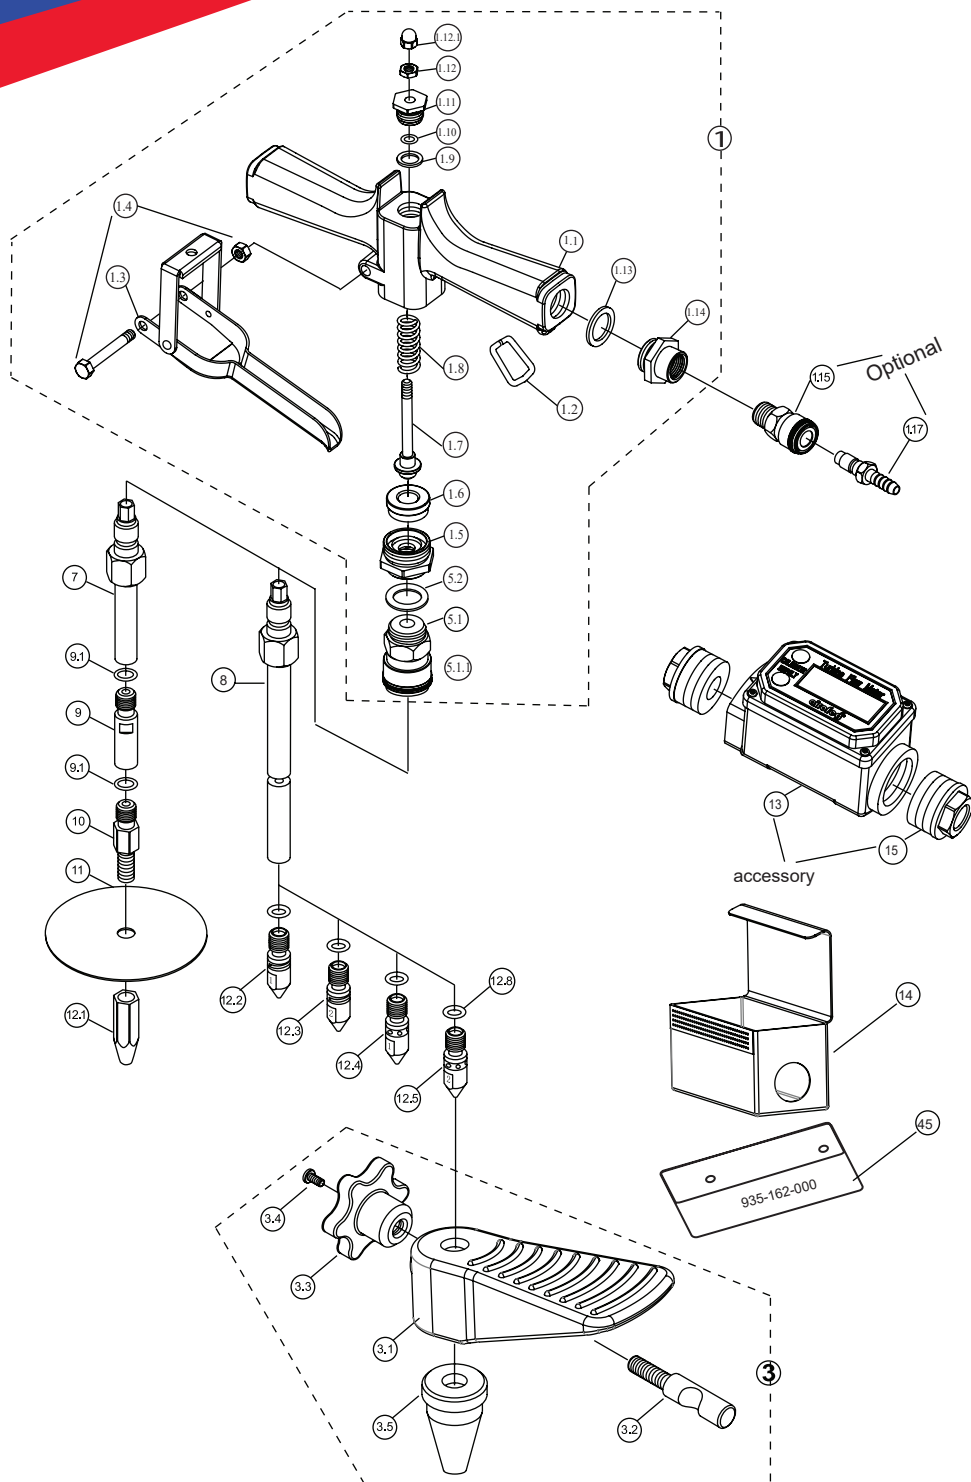

Airofog USA
15074 Aviation Loop Drive
Brooksville, FL 34604
USA

+1-352-593-5152
airofog@airofogusa.com
www.airofogusa.com

TERMI-tool Parts List

Pos. Part no. Description

1	771-001-000	Valve assembly
1.1	771-001-010	Valve body
1.2	771-001-020	Ring
1.3	771-001-030	Trigger
1.4	771-001-004	Pin
1.5	771-001-050	Adapter
1.6	771-001-060	Packing
1.7	771-001-070	Shutoff stem
1.8	771-001-080	Shutoff spring
1.9	771-001-090	Gland
1.10	771-001-110	O-ring
1.11	771-001-110	Screw
1.12	771-001-120	Nut
1.12.1	771-001-121	Cap nut
1.13	771-001-130	Seal
1.14	771-001-140	Adapter
5.1	770-005-010	Quick connect socket
5.1.1	770-005-011	Quick connect o-ring
5.2	771-005-020	Gasket
3	770-003-000	Cone seal assembly

Service kits

771-006-010	Valve service kit (1.6, 1.9, 1.10, 5.1.1, 5.2)
771-006-020	Tip service kit (9.1x2, 12.8x4, 3.5)

Pos. Part no. Description

3.1	770-003-010	Foot ram
3.2	770-003-020	Bolt
3.3	770-003-030	Knob
3.4	770-003-040	Scew
3.5	770-003-050	Cone seal
7	770-007-000	Extension rod 12"
8	770-008-000	Extension rod 40"
9	770-009-000	Check valve
9.1	770-009-010	O-ring
10	770-010-000	Adapter
11	770-011-000	Anti splash guard
12.1	770-012-010	Void tip
12.2	770-012-020	180 1gpm fan tip
12.3	770-012-030	180 2gpm fan tip
12.4	770-012-040	360 1gpm six hole tip
12.5	770-012-050	360 2gpm six hole tip
12.8	770-012-080	O-ring

Optional Extras

1.15	770-001-150	Quick connect socket
1.17	770-001-170	Quick connect hose plug
13	771-013-000	Flow meter
14	771-014-000	Flow meter pouch
15	771-015-000	Adapter NPT 1"
45	953-162-000	Airofog tool bag



Airofog USA
15074 Aviation Loop Drive
Brooksville, FL 34604
USA

+1-352-593-5152
airofog@airofogusa.com
www.airofogusa.com