


# Solar Panel Bird Deterrent Kit

## Installation Instructions

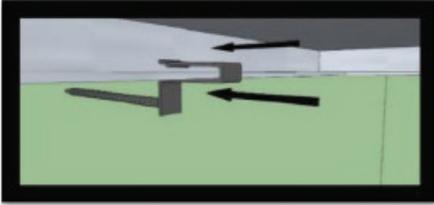


### STEP 1:

Put the clip end of the fastener onto the panel edge underneath the panel. Slide as far outward as possible so the clip is all the way on the lip of the panel.



### STEP 2:

Set the wire mesh screen in place. Make sure the fastener rod comes through the screen at an upward angle as to keep pressure of the screen on the roof top.

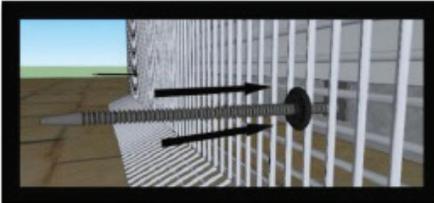

### STEP 3:

Slide the speed washer onto the shaft of the clip assembly until snug. Make adjustments to the screen as necessary. Tighten speed washer to panel edge.



### STEP 4:

Cut off any excess mesh screen sticking over the top edge of the solar panel array. Cut off the clip assembly rod flush with the exterior of the speed washer.



### STEP 5:

Where the outside corners come together use two pieces of mesh screen. Cut a 1" slit in bottom flange to allow the screen to bend. Bend one edge of the screen to go around the corner 3-4 inches. Attach the corner together using thin bailing wire or UV rated zip ties.



### STEP 6:

Inside corners just mount one screen as normal and cut a slight 10 degree angle in the piece that will butt up to it, then secure with zip ties.

### QUESTIONS?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915

Email: nobirds@birdbgone.com



BIRDBGONE.COM | 800.392.6915