


Now comes standard with the **NEW EZ Service Tray**.




1

Insert rods through the bottom of the tray until they "snap" into place.

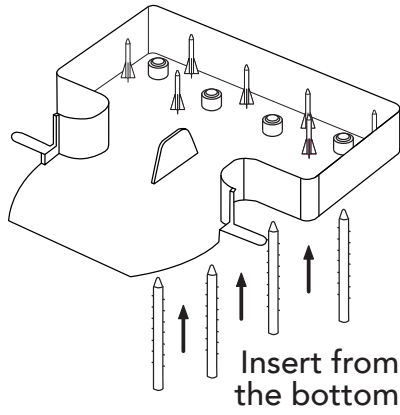

2

Once all 4 rods are in place, the tray will hold:

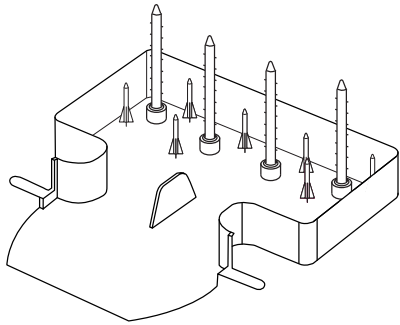

4

Pieces of block bait

8

Pieces of soft bait


www.vmproducts.com

Now comes standard with the **NEW EZ Service Tray**.




1

Insert rods through the bottom of the tray until they "snap" into place.

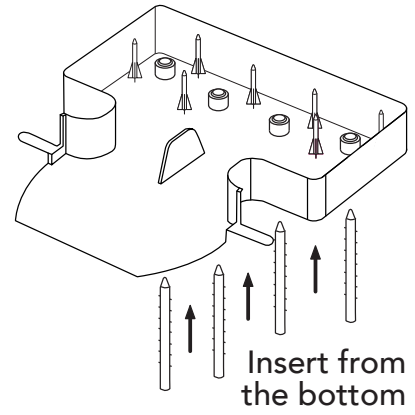

2

Once all 4 rods are in place, the tray will hold:

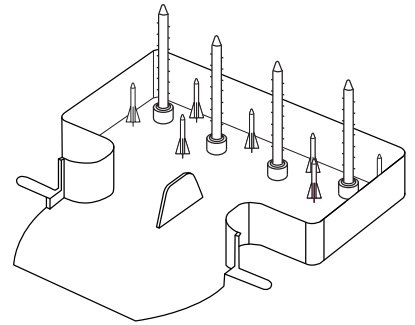

4

Pieces of block bait

8

Pieces of soft bait


www.vmproducts.com

Now comes standard with the **NEW EZ Service Tray**.




1

Insert rods through the bottom of the tray until they "snap" into place.

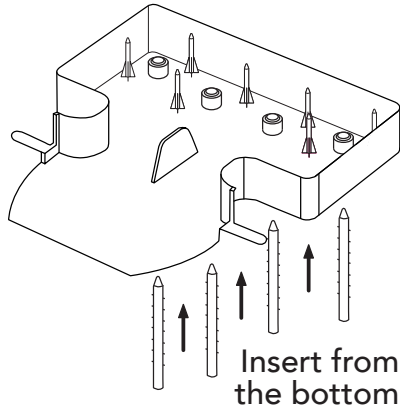

2

Once all 4 rods are in place, the tray will hold:

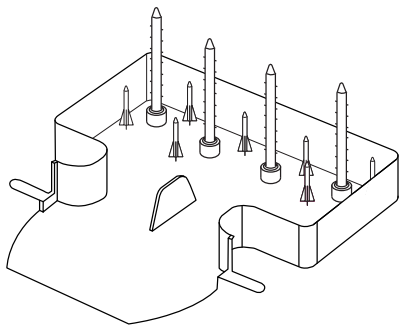

4

Pieces of block bait

8

Pieces of soft bait


www.vmproducts.com

Now comes standard with the **NEW EZ Service Tray**.




1

Insert rods through the bottom of the tray until they "snap" into place.

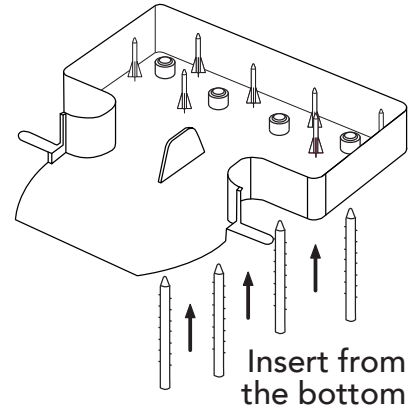

2

Once all 4 rods are in place, the tray will hold:

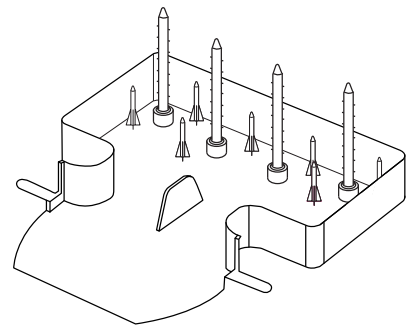

4

Pieces of block bait

8

Pieces of soft bait

www.vmproducts.com