


**Note:** Your unit may look different.

# Hang Kit

Part No. 4029908

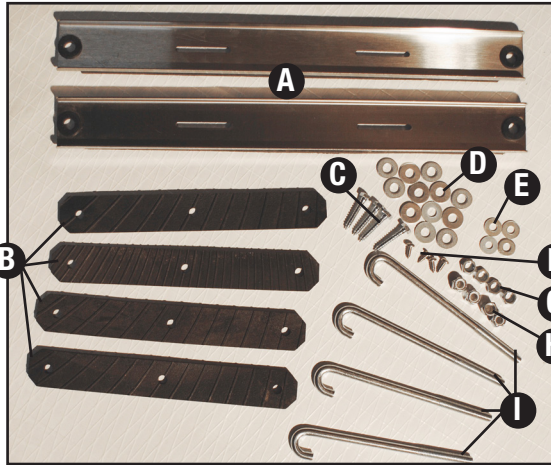




## Parts Included:

- A. Bracket Assembly (2)
- B. Hanging Strap (4)
- C. Lag Bolt, #1/4-10 x 1-1/2" (4)
- D. Washer, 5/16" (12)
- E. Washer, 1/4" (4)
- F. Hex Head Screw, #5/16-18 x 1" (4)
- G. Nut, 3/8-16" (4)
- H. Lock Nut, 3/8-16" (4)
- I. J-Bolt, 3/8-16 x 7" (4)

**Tools Required:** Drill, 5/32" Drill Bit, Philips Screwdriver, Ratchet, Tape Measure, Level

**⚠ CAUTION!** After installing, make sure the unit is level.

**Step 1:** Attach the J bolts to the brackets as shown.

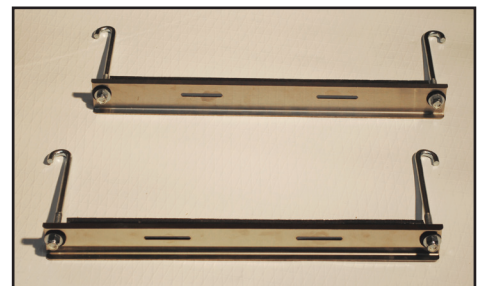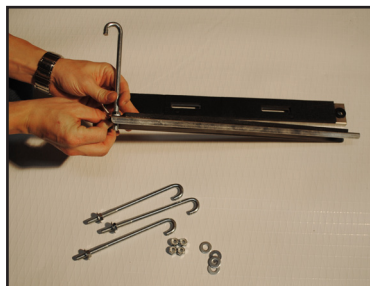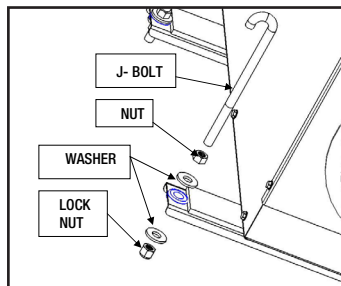

**Step 2:** Measure the distance needed between each strap and the height needed from the bottom of the floor joist to ensure the unit is level.



**Therma-Stor<sup>®</sup> LLC**

Driven by performance. Powered by design.™


4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • [www.thermastor.com](http://www.thermastor.com) • [sales@thermastor.com](mailto:sales@thermastor.com)

OVER



TS-513 1/13

**Step 3:** Install the (4) hanging straps from the floor joists using lag bolts and 1/4" washers. **Note:** Use a 5/32" drill bit to pre-drill holes before installing lag bolts.

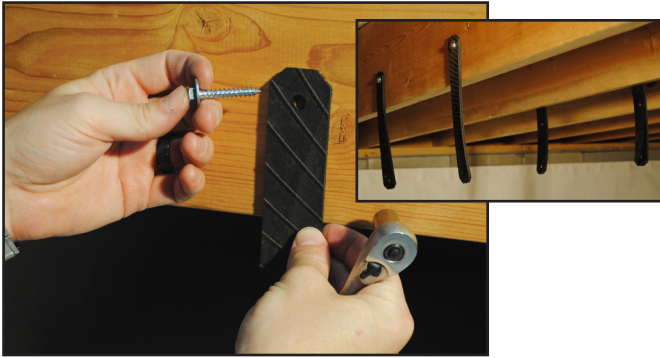

**Step 4:** Install the brackets using the J bolts to hook into the straps.



**Step 5:** Position the unit to hang.



**Step 6:** Lift the unit into place. Two people may be needed for ease of install.



**Step 7:** Position unit into place and add the (4) Hex Head screws and the (4) 5/16" washers to secure the unit to the hang kit.



**Step 8:** Make sure the unit is level.



Driven by performance. Powered by design.™

4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • [www.thermastor.com](http://www.thermastor.com) • [sales@thermastor.com](mailto:sales@thermastor.com)  
TS-513 1/13